

C-22 SAILBOAT


(Model 333)

MEASUREMENTS FOR CENTERBOARD DEGREE OF OPERATION

Measure centerboard line to 91 inches and cut to that length. Re-install line and anchor with knot on end at wench. At this point the centerboard location will be at 60 degrees. When centerboard is in up position, 14½ turns drop will position centerboard at 30 degrees. Another 5 ¾ turns down will drop centerboard to 45 degrees.

If pulley is marked and line marked with a color these measurements will represent degrees.

72 inches	Pulley to centerboard shackle	60 Degrees
60½ inches	Pulley to centerboard shackle	45 Degrees
50 inches	Pulley to centerboard shackle	30 Degrees

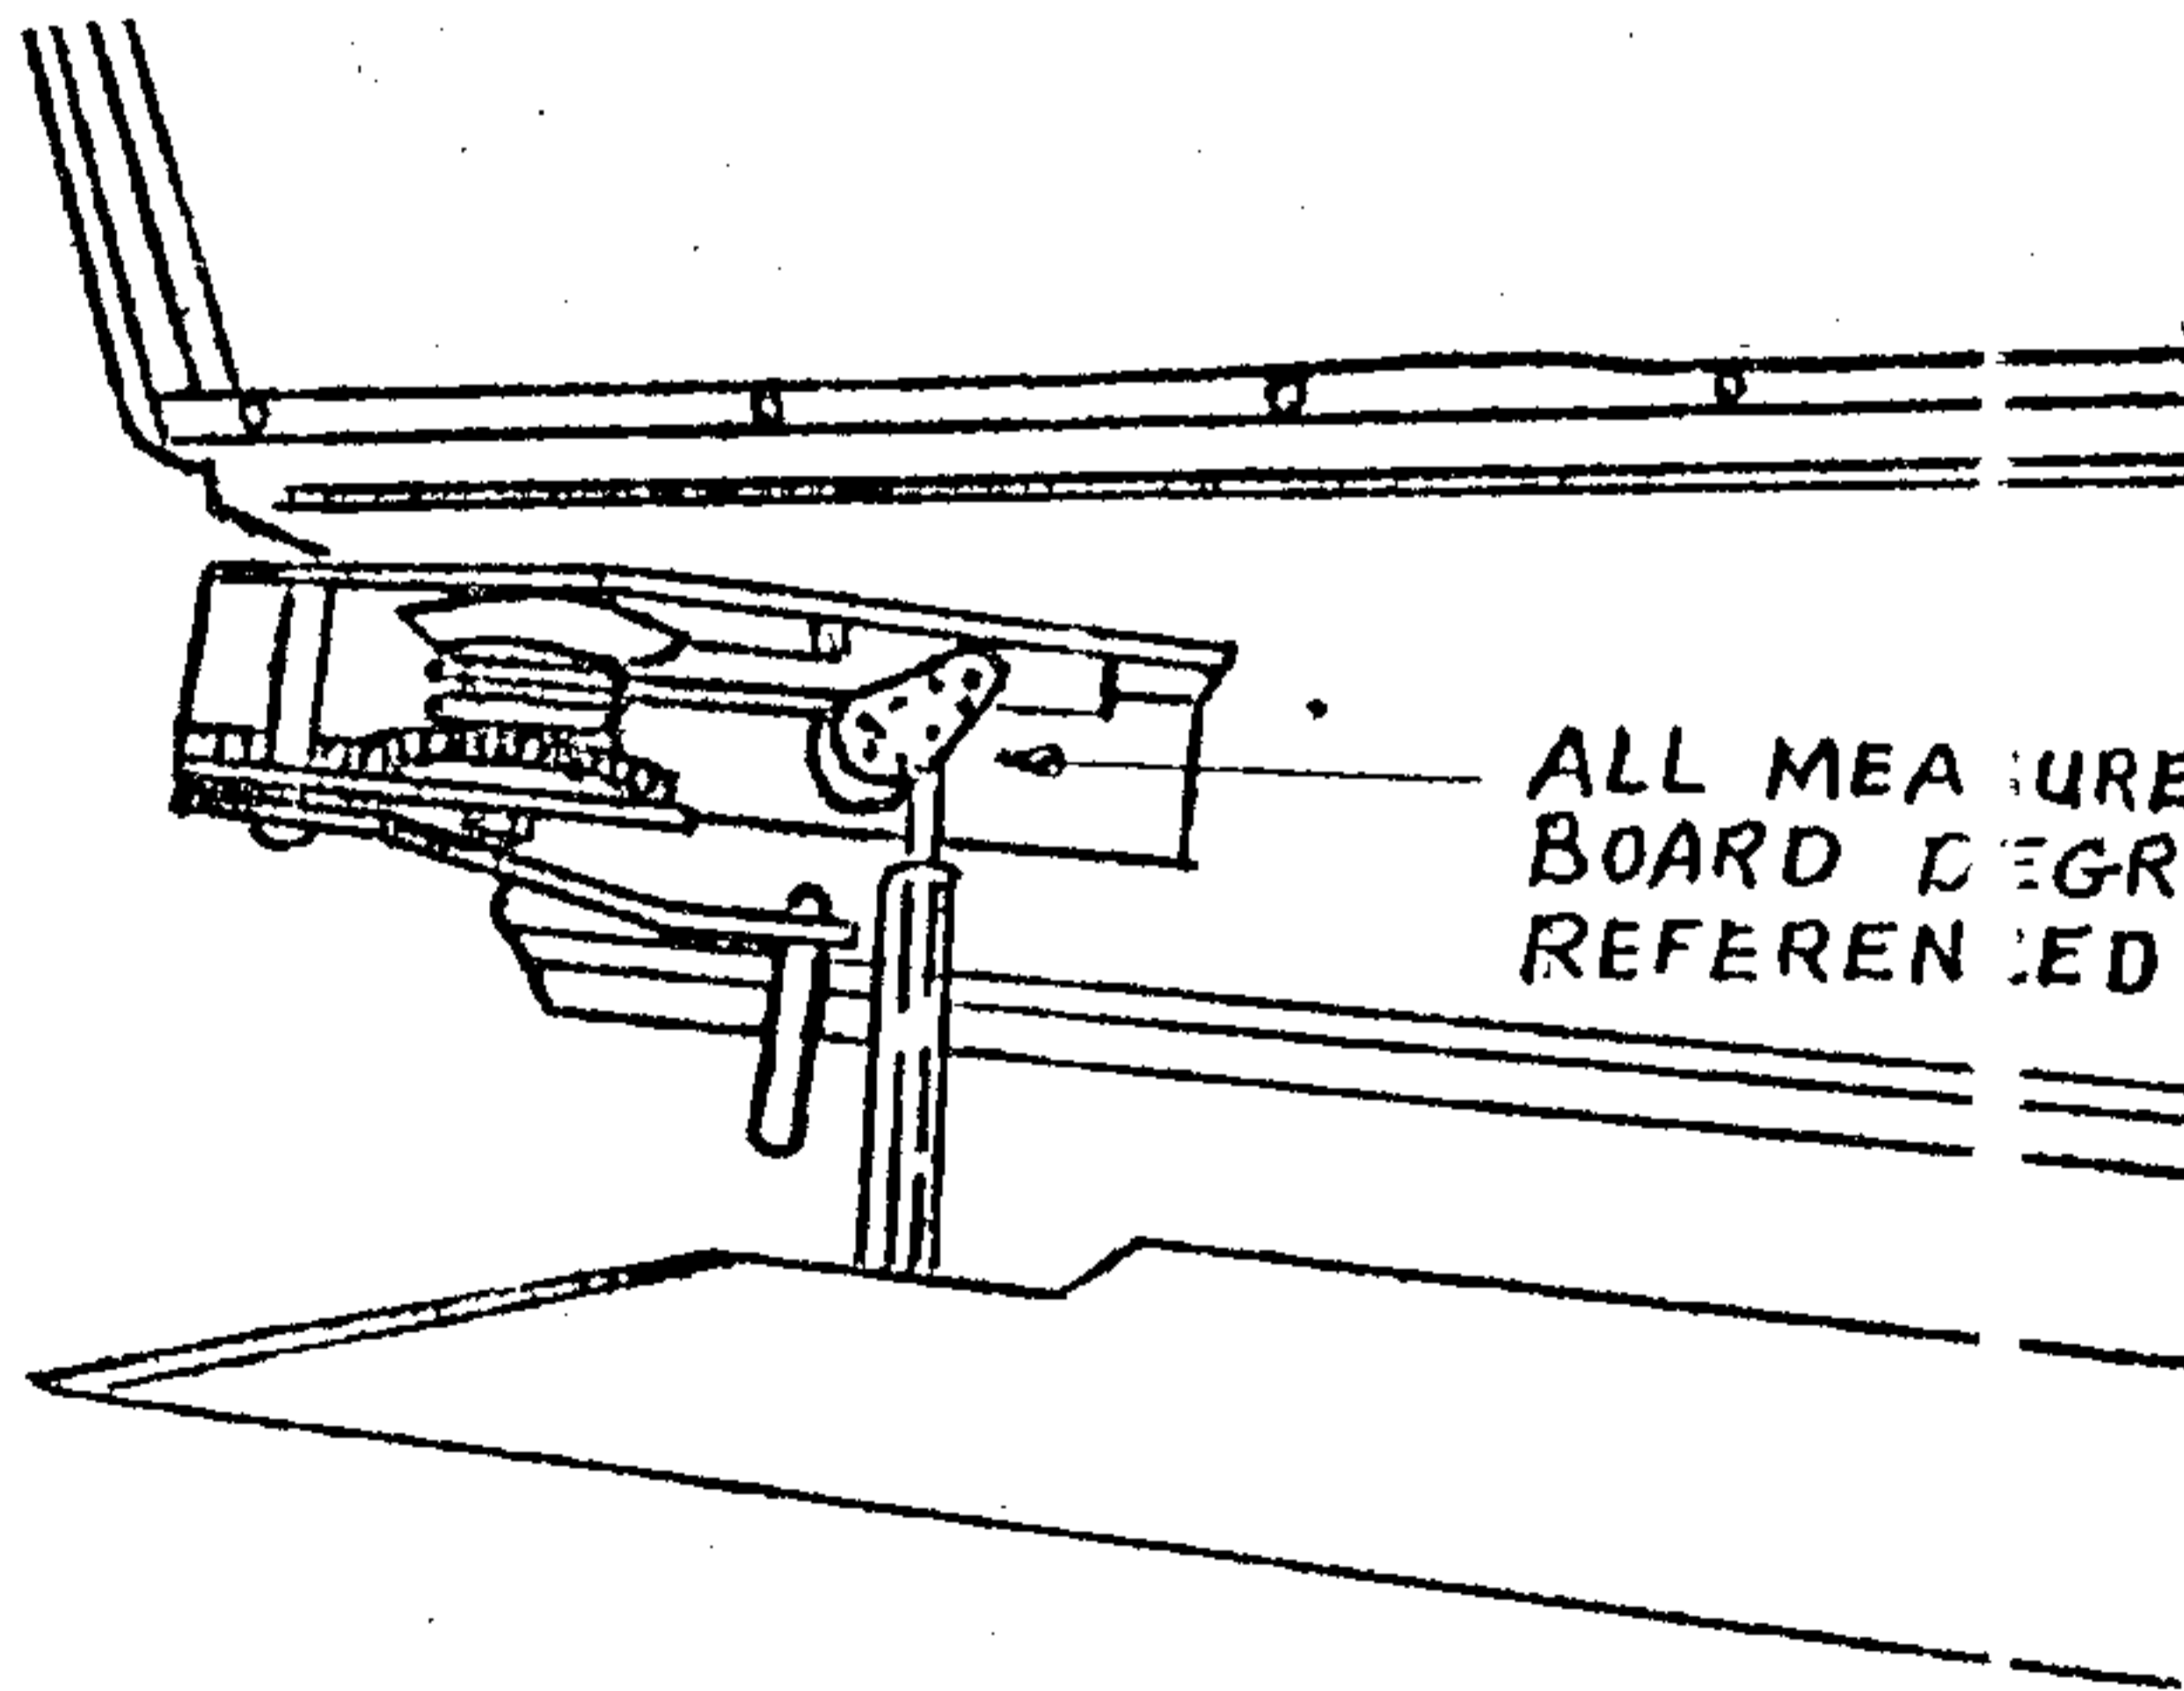

ALL MEASUREMENT FOR CENTERBOARD DEGREE ANGLES ARE REFERENCED AT THIS POINT